

# ROITHNER LASERTECHNIK GmbH

WIEDNER HAUPTSTRASSE 76 IO40 VIENNA AUSTRIA TEL. +43 I 586 52 43 -0, FAX. -44 OFFICE@ROITHNER-LASER.COM



## RLT830-200MGS

- Infrared Laser Diode
- 830 nm, 200 mW
- Single Mode
- TO18 package, Flat Window





## Description

**RLT830-200MG** is a infrared **single mode** laser diode, typically emitting at **830 nm**, with a rated output power of 200 mW. It comes in 5.6 mm TO-Can package **with integrated PD**.

## Maximum Rating\* (TCASE = 25°C)

Davameter	Cumbal	Val	Unit		
Parameter	Symbol	Min.	Max.	Offic	
Reverse Voltage	$V_{R}$		2	V	
Operating Temperature*	$T_{OPR}$	- 20	+ 50	°C	
Storage Temperature*	$T_{STG}$	- 40	+ 80	°C	
Soldering Temperature (max. 3s)	$T_{SOL}$		+ 260	°C	

<sup>\*</sup> operating close to or outside these conditions may damage the device

## Electro-Optical Characteristics (TCASE = 25°C)

Parameter		Symbol	Values			l lmi4
			Min.	Тур.	Max.	Unit
Peak Wavelength		λ <sub>P</sub>	±10	830	±15	nm
Spectral Width (FWHM)		λ		3.0		nm
Optical Output Power		<i>P</i> o		200		mW
Operating Voltage		V <sub>F</sub>		2.7	3.2	V
Threshold Current		<i>I</i> th		40	70	mA
Operating Current		<i>l</i> F		260	280	mA
PD Current		$I_{PD}$		0.6		mA
PD Reverse Voltage		$V_{PD}$			25	V
Slope Efficiency		η		1		mW/mA
Beam Divergence (FWHM)	parallel	ΘII		8		deg.
	perpendicular	θΤ		28		deg.



www.roithner-laser.com

1



# ROITHNER LASERTECHNIK GMBH


IO40 VIENNA AUSTRIA OFFICE@ROITHNER-LASER.COM



### **Electrical Connection**

#### **Pin Configuration**


PIN#	Function	1
PIN 1	LD cathode	
PIN 2	LD anode, PD cathode	LD /
PIN 3	PD anode	



**WIEDNER HAUPTSTRASSE 76** 

TEL. +43 I 586 52 43 -0, FAX. -44

#### **Bottom View**






LASER RADIATION AVOID EYE OR SKIN EXPOSURE TO

RECT OR SCATTERED RADIATIO CLASS 4 LASER PRODUCT

2

### **Outline Dimensions**

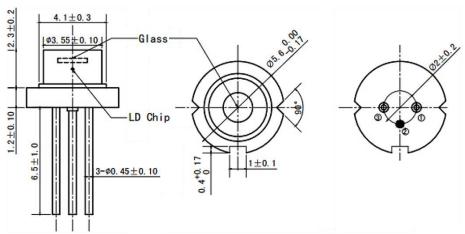

All dimensions in mm

### **Precautions**

#### Safety

Caution:

Laser light emitted from any laser diode may be harmful to the human eye. Avoid looking directly into the laser diode's aperture when the diode is in operation.

**Note:** The use of optical lenses with this laser diode will increase eye hazard.

#### **ESD Caution**

Always do handle laser diodes with extreme care to **prevent electrostatic discharge**, the primary cause of unexpected diode failure. To prevent ESD related failures, it is strongly advised to always **wearing wrist straps**, and **grounding all applicable work surfaces**, when handling laser diodes

#### **Operating Considerations**

It is strongly advised to only operate this laser diode with a current source. The current of a laser diode is an exponential function of the voltage across it. **Usage of current regulated drive circuits is mandatory**.

Laser diodes may be damaged by excessive drive currents or switching transients.

It is advised, to operate the laser diode at the lowest temperature possible, and to never exceed maximum specifications as outlined in the datasheet. Device degradation will accelerate with increased temperature. **Proper heat sinking will greatly enhance stability and life time of the laser diode**.

The above specifications are for reference purpose only and subjected to change without prior notice.

www.roithner-laser.com

<sup>©</sup> All Rights Reserved