


WIEDNER HAUPTSTRASSE 76 IO40 VIENNA AUSTRIA TEL. +43 I 586 52 43 -0, FAX. -44, OFFICE@ROITHNER-LASER.COM



S6310MG

TECHNICAL DATA

Infrared Laser Diode





Features

Lasing Mode Structure: single mode
Peak Wavelength: typ. 635 nm
Optical Ouput Power: 10 mW

Package: 5.6 mm



Electrical Connection

Pin Configuration					Bottom View	
10	3	n-type			2	
15	7700	PIN	Function			
rD 🖳	→ PD	1	LD Cathode		> • • <	
	26/	2	LD Anode, PD Cathode		1 3	
		3	PD Anode			
	02					

Absolute Maximum Ratings (Tc=20°C)

Item	Symbol	Value	Unit
CW Output Power	Po	12	mW
LD Reverse Voltage	V_r	2	V
PD Reverse Voltage	V_{rPD}	30	V
Operating Case Temperature	Tc	-10 +50	ů
Storage Temperature	T_{stg}	-15 +85	°C

Specifications (Tc=20°C)

Item	Symbol	Min.	Тур.	Max.	Unit					
Optical Specifications										
CW Output Power	Po	ı	10	•	mW					
Center Wavelength	λς	630	638	642	nm					
FWHM Beam Divergence	θ∥	6	8	12	deg					
FWHIVI Beam Divergence	θΤ	28	33	37	deg					
Electrical Specifications										
Threshold Current	I _{th}	ı	30	40	mA					
Operating Current	lop	ı	45	60	mA					
Slope Efficiency	η	0.3	0.6	ı	mW/mA					
Operating Voltage	Uop	ı	2.2	2.6	V					
Monitor Current	Im	0.05	0.15	0.4	mA					

The above specifications are for reference purpose only and subjected to change without prior notice.




WIEDNER HAUPTSTRASSE 76

1040 VIENNA TEL. +43 I 586 52 43 -0, FAX. -44, OFFICE@ROITHNER-LASER.COM




Package Dimensons

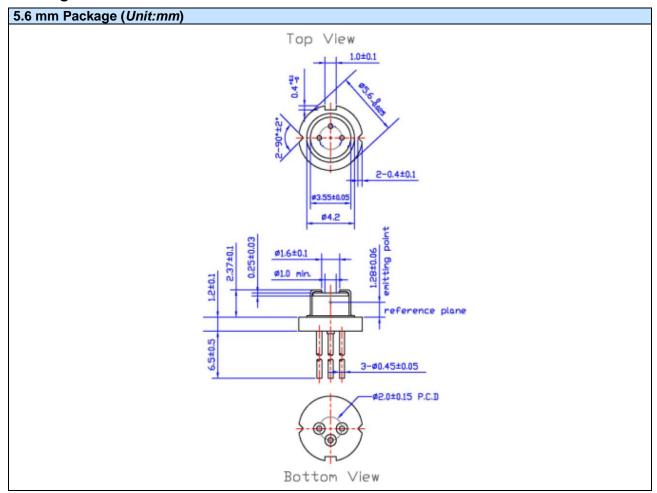

Typical Performance Curves

Optical Ouput Power vs. Forward Current

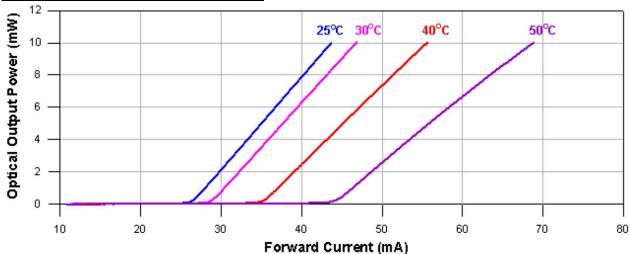




TEL. +43 I 586 52 43 -0, FAX. -44, OFFICE@ROITHNER-LASER.COM


1040 VIENNA AUSTRIA




Forward Voltage vs. Forward Current

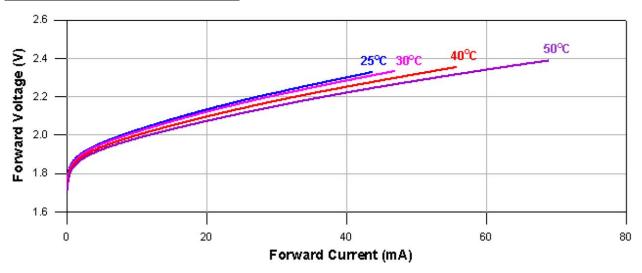

Peak Wavelength vs. Case Temperature

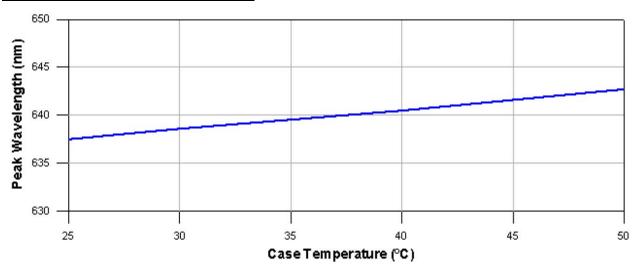

Far-Field Pattern

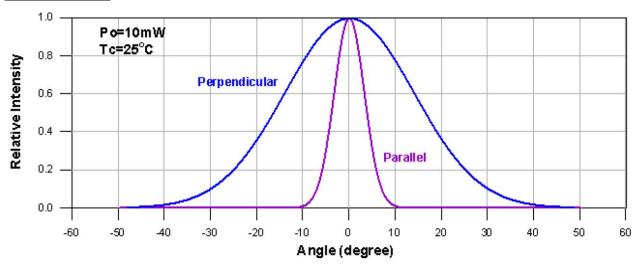





WIEDNER HAUPTSTRASSE 76 IO40 VIENNA AUSTRIJ TEL. +43 I 586 52 43 -0, FAX. -44, OFFICE@ROITHNER-LASER.COM




Monitor Current vs. Optical Output Power

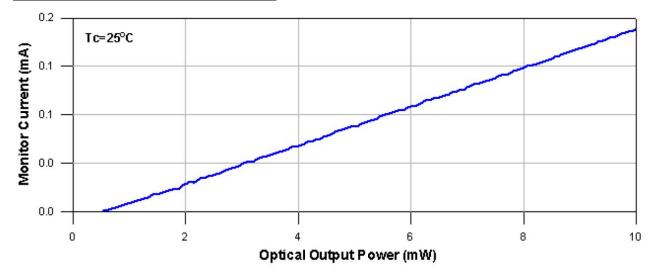

Slope Efficiency vs. Case Temperature

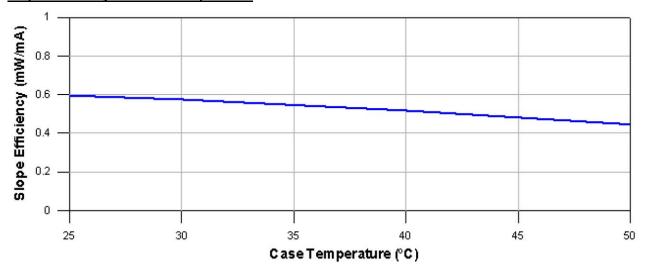

Threshold Current vs. Case Temerature

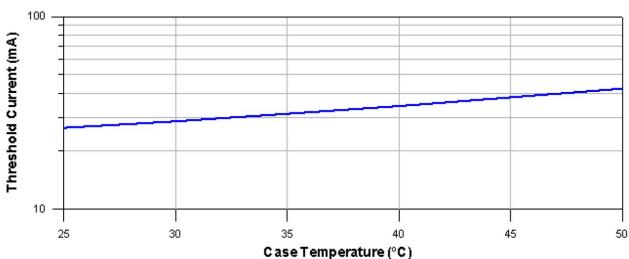



Safety of Laser light

Laser Light can damage the human eyes and skin. Do not expose the
eye or skin directly to any laser light and/or through optical lens. When
handling the LDs, wear appropriate safety glasses to prevent laser
light, even any reflections from entering to the eye. Focused laser
beam through optical instruments will increase the chance of eye
hazard.



Cautions

1. Operating methode

- This LD shall change its forward voltage requirement and optical ouput power according to temperature change. Also, the LD will require more operation current to maintain same ouput power as it degrades. In order to maintain output power, use of APC (Automatic Power Control) is recommended. Which use monitor feedback to adjust the operation current.
- Confirm that electrical spike current generated by swithing on and off does not exceed the
 maximum operating current level specified herein above as absolute maximum rating. Also,
 employ appropriat countermeasures to reduce chattering and/or overshooting in the circuit.

2. Static Electricity

• Static electricity or electrical surges will reduce and degrade the reliability of the LDs. It is recommended to use a wrist trap or anti-electrostatic glove when handeling the product.

3. Absolute Maximum Rating

Active layer of LDs shall have high current density and generate high electric field during its
operation. In order to prevent excessive damage, the LD must be operated strictly below
absolute maximum rating.

