

WIEDNER HAUPTSTRASSE 76 IO40 VIENNA AUSTRIA TEL. +43 I 586 52 43 -0, FAX. -44, OFFICE@ROITHNER-LASER.COM



S6505MG



TECHNICAL DATA

Infrared Laser Diode

Features

Lasing Mode Structure: single mode
Peak Wavelength: typ. 650 nm
Optical Ouput Power: 5 mW

Package: 5.6 mm



Electrical Connection

Pin Configuration			Bottom Vie	W
10 03	n-type		2	
🛨 🗸	PIN	Function		
LD / PD	1	LD Cathode		\prec
	2	LD Anode, PD Cathode	_ \ 1 \ 3	
	3	PD Anode		/
02				

Absolute Maximum Ratings ($T_C=20$ °C)

Item	Symbol	Value	Unit
CW Output Power	Po	5	mW
LD Reverse Voltage	$V_{\rm r}$	2	V
PD Reverse Voltage	V_{rPD}	30	V
Operating Case Temperature	T _C	-10 +50	°C
Storage Temperature	T _{stq}	-15 +85	°C

Specifications ($T_C=20$ °C)

Item	Symbol	Min.	Тур.	Max.	Unit			
Optical Specifications								
CW Output Power	Po	-	5	-	mW			
Center Wavelength	λ_{C}	640	655	660	nm			
FWHM Beam Divergence	θ∥	5	8	12	deg			
	θΪ	28	33	38	deg			
Electrical Specifications								
Threshold Current	I _{th}	-	18	30	mA			
Operating Current	l _{op}	-	25	36	mA			
Slope Efficiency	η	0.4	0.65	-	mW/mA			
Operating Voltage	U_{op}	-	2.1	2.5	V			
Monitor Current	I _m	0.05	0.3	0.5	mA			

The above specifications are for reference purpose only and subjected to change without prior notice.




WIEDNER HAUPTSTRASSE 76

1040 VIENNA TEL. +43 I 586 52 43 -O, FAX. -44, OFFICE@ROITHNER-LASER.COM




Package Dimensons

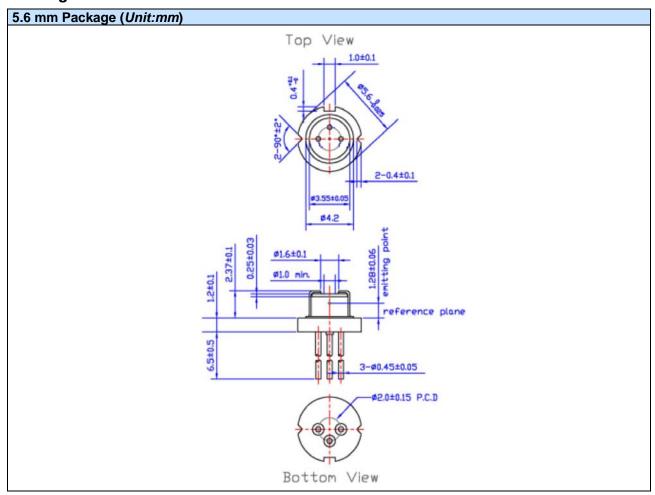

Typical Performance Curves

Optical Ouput Power vs. Forward Current

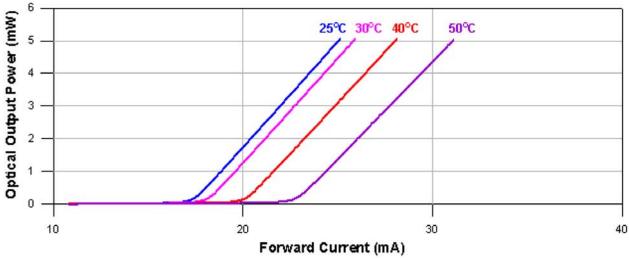




WIEDNER HAUPTSTRASSE 76


1040 VIENNA TEL. +43 I 586 52 43 -O, FAX. -44, OFFICE@ROITHNER-LASER.COM




Forward Voltage vs. Forward Current

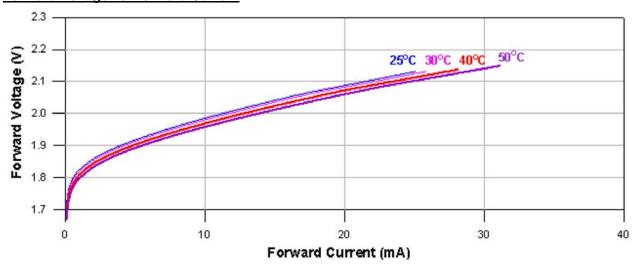

Peak Wavelength vs. Case Temperature

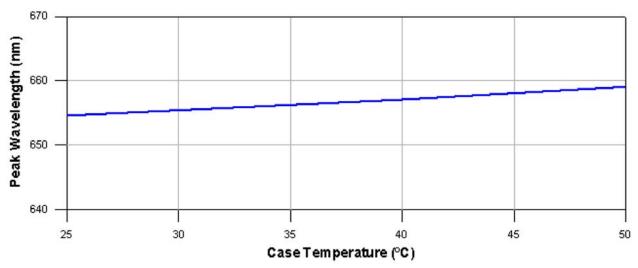

Far-Field Pattern

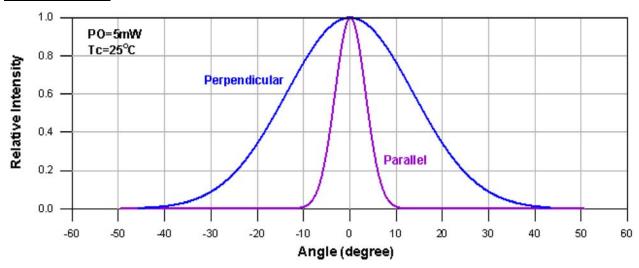





WIEDNER HAUPTSTRASSE 76 IO40 VIENNA AUSTRIA TEL. +43 I 586 52 43 -0, FAX. -44, OFFICE@ROITHNER-LASER.COM




Monitor Current vs. Optical Output Power

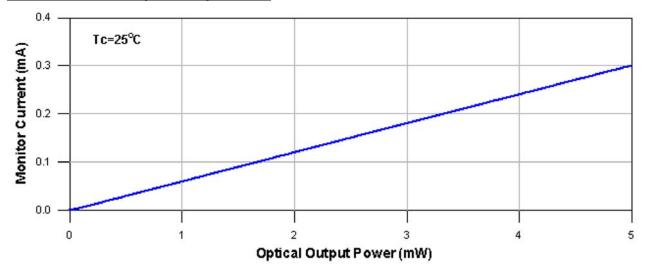

Slope Efficiency vs. Case Temperature

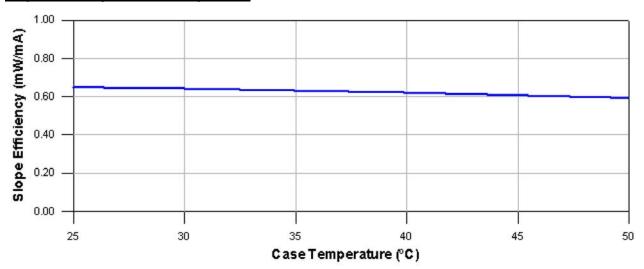

Threshold Current vs. Case Temerature

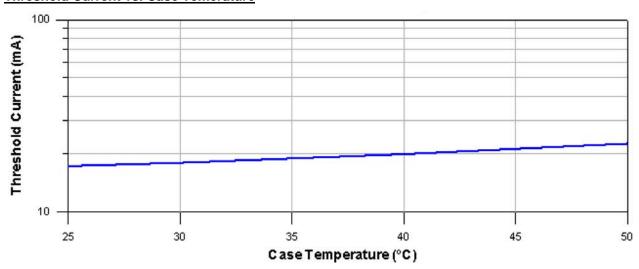



Safety of Laser light

Laser Light can damage the human eyes and skin. Do not expose the
eye or skin directly to any laser light and/or through optical lens. When
handling the LDs, wear appropriate safety glasses to prevent laser
light, even any reflections from entering to the eye. Focused laser
beam through optical instruments will increase the chance of eye
hazard.



Cautions

1. Operating methode

- This LD shall change its forward voltage requirement and optical ouput power according to temperature change. Also, the LD will require more operation current to maintain same ouput power as it degrades. In order to maintain output power, use of APC (Automatic Power Control) is recommended. Which use monitor feedback to adjust the operation current.
- Confirm that electrical spike current generated by swithing on and off does not exceed the
 maximum operating current level specified herein above as absolute maximum rating. Also,
 employ appropriat countermeasures to reduce chattering and/or overshooting in the circuit.

2. Static Electricity

• Static electricity or electrical surges will reduce and degrade the reliability of the LDs. It is recommended to use a wrist trap or anti-electrostatic glove when handeling the product.

3. Absolute Maximum Rating

Active layer of LDs shall have high current density and generate high electric field during its
operation. In order to prevent excessive damage, the LD must be operated strictly below
absolute maximum rating.

